




### Get to Know Your Gear

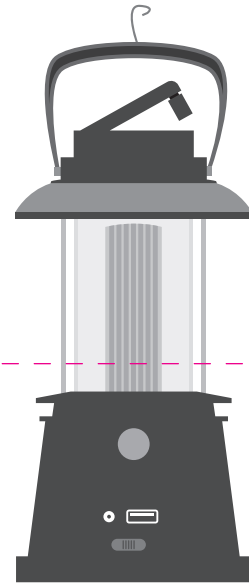

**HANG IT**  
Put the LIGHTHOUSE anywhere with the built-in hanger.

**CHARGE IT**  
The LIGHTHOUSE can be charged via AC plug, DC plug, dynamo crank function, or with GOAL ZERO solar panels.


**POWER IT**  
With the USB output you can charge any USB device directly from the LIGHTHOUSE.

### Getting Started

1. Be sure to ACTIVATE YOUR WARRANTY at [www.GOALZERO.com/warranty](http://www.GOALZERO.com/warranty)
2. Use with NOMAD 7 Solar Panel. Will also charge with wall outlet and DC car charger.

### How to Use Your Gear

- 1 **Multiple power sources**  
Plug into LIGHTHOUSE using either AC cord, or DC cord depending on source.
- 2 **Charge up lantern**  
To charge from GOAL ZERO Solar panels, use the 12v car adapter included.
- 3 **Dynamo crank**  
To charge by dynamo crank function, flip crank handle up from top of lantern and rotate. One minute of cranking will provide up to ten minutes of light.
- 4 **Light modes**  
Push button once for lantern mode, twice for red emergency alert mode.
- 5 **To use USB**  
Slide USB switch to 'on' position. When not in use, switch to off position.

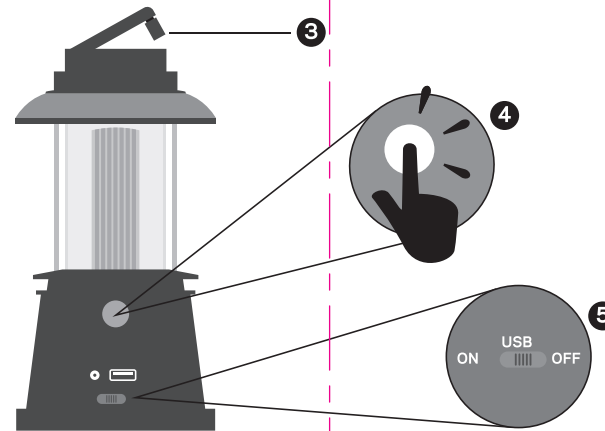

### Technical Specs

Usage	
Recharge time	4 hours
Run time	5+ hours
Inputs	
12V port	Charging port (male car adapter) 12V, 0.5A max (2.5W)
Hand crank	1W (1 minute crank for 10 minute run-time)
Outputs	
Light	Power: 1W, white LED Life-span: 10s of thousands of hours Visible distance: 120 meters
USB port	5V, 1.0A max (5W)
Internal	
Battery	Lithium-ion 4V, 3Ah (12Wh)
Battery mgmt.	Life-span: thousands of cycles integrated and fully automatic
General	
Weight	2 lbs (0.94 kg)
Dimensions	5x5x12 in (14 x 14 x 30.5 cm)
Warranty	12 months
Optimal operating temp.	32-104°F (0-40°C)

### Comes With

- AC wall charger
- DC car adapter

Die Cut Line: \_\_\_\_\_

Mountain Fold: - - - - -

Valley Fold: - - - - -

**Frequently Asked Questions**

**How often do I need to charge the LIGHTHOUSE?**

It is recommended to charge your LIGHTHOUSE lantern every 3 months.

**What is the USB switch for?**

Turn the switch to the OFF position when not in use. Switch activates USB output for charging devices. If left on for a long period of time, it can potentially damage your battery.

**Why do I not get a full charge on my USB devices (i.e. tablet and smartphone?)**

The primary function of the LIGHTHOUSE is to provide ambient light. Therefore the battery capacity may be smaller than most USB devices require for a full charge.

**Compatible With**

*GOAL ZERO products:*

- SHERPA power packs
- ESCAPE 150 power pack
- NOMAD 7
- NOMAD 13.5
- NOMAD 27



**USER GUIDE**



FRONT PANEL

- Fill out your warranty
- Watch demo video
- Download this manual



**CONTACT US:**

Toll Free: 888.794.6250  
14864 Pony Express Road  
Bluffdale, UT, 84065

**WWW.GOALZERO.COM**

We proudly support Tifie Humanitarian  
**WWW.TIFIE.ORG**

BACK PANEL

Die Cut Line: \_\_\_\_\_

Mountain Fold: - - - - -

Valley Fold: - - - - -